



Tudelü®

Walls That Move You™


Touch Controller Guide

What is the Tudelü Touch Controller?

The latest in innovation from the research and development lab at Tudelü, the Touch Controller is used to operate the Mute System. Featuring a light up panel and touch screen operation, this customizable password controller combines function and style.

Tudelü Touch Controller Setup:

The Tudelü Touch Controller is connected to the main control box via “switch” connectors and serve as your main control system for every day operation. The additional connectors as show in the figure below are set up through installation service and should not be moved or adjusted without direct support from Tudelü .

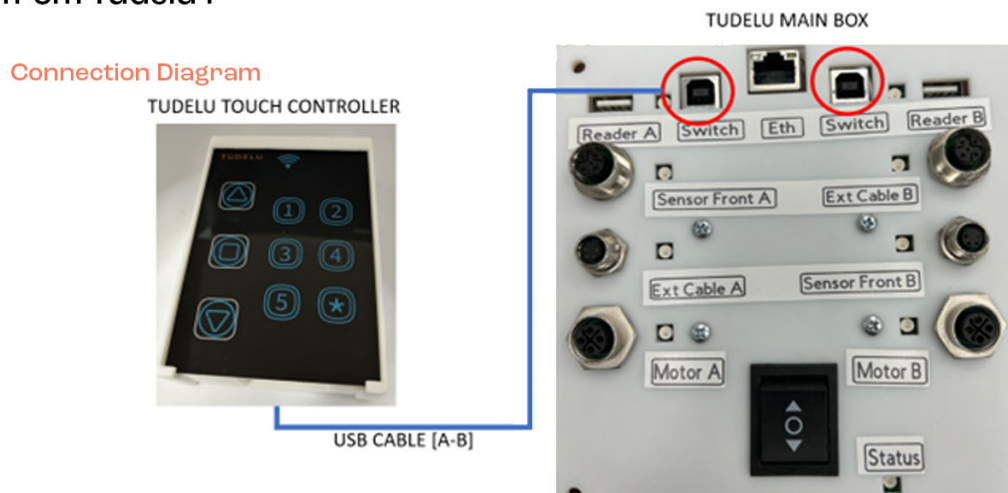

Once the system is connected, you will then notice the initial controller calibration sequence. The Tudelü Touch Controller should see connection in approximately 2-5 seconds. The controller will then calibrate (between 5-7 seconds) followed by the entire Touch Controller lighting up. This will indicate completion of calibration and start waiting mode.

“Blinking” Sample



Waiting Mode Indicator



Please note: While in waiting mode, the system’s only command available is STOP (Center Square Button).

Questions:

Call 718.782.7882 or E-mail info@tudelu.com

Tudelü Touch Controller Operation:

To enable the **Tudelü** Touch Controller, you must first enter the four (4) digit factory default password (1-2-3-4) and press the asterisk button (*). If the password is entered correctly, the motion buttons (up // stop // down) will blink three (3) times and will enter operation mode for approximately 20 seconds before it returns to wait mode.

Operation Mode




During operation mode, the user can activate the system by pressing the up and down corresponding buttons. In addition, once the **Tudelü** system starts to move, the user can also press the stop button to stop the system in any interval desired.

Changing the password on the Tudelü Touch Controller:

Changing the password for your **Tudelü** Touch Controller is very simple and can be completed in less than thirty (30) seconds.

Step 1: Enter your current password followed by pressing and holding the asterisk (*) button for five (5) seconds. (If this is your first time changing the password, the default password is 1-2-3-4). This will cause the Touch Controller to blink six (6) times. This means it will be ready to accept the new password.

Password Change Mode

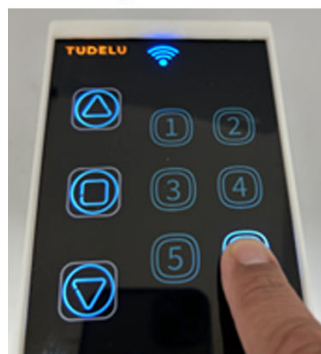

Questions:

Call 718.782.7882 or E-mail info@tudelu.com

Changing the password on the Tudelü Touch Controller: Continued

Step 2: Enter the newly desired four (4) digit password and press the asterisk (*) button. If the new password has been accepted, the system will blink one additional time indicating the password is now saved. In addition, the system will repeat the password by lighting up on the controller.

Note: If the new system password has not been accepted, the system will not save the password.

Restoring factory defaults:

If your Touch Controller is getting confused or failing to function in a proper manor, you can always reset the product back to factory default. This is super simple to do and takes less than two (2) minutes.

Step 1: Make sure you have power to your system and that the system is either in the fully open or closed position if possible.

Step 2: Open the panel of your Tudelü Touch Controller by sliding the front facing panel up to expose the wiring inside.

How to open panel



SW2 button location



Step 3: You will notice a small button on the main board just to the right of the display wire. This button is called SW2. Press and hold SW2 for approximately five (5) seconds. The system will blink three (3) times to confirm the system is reset. This reset includes changing the Touch Controller back to factory default password (1-2-3-4).

Questions:

Call 718.782.7882 or E-mail info@tudelu.com